



SGH-B300

User's Guide

 
 
- Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

World Wide Web
http://www.samsungmobile.com



Printed in Korea
Code No.:GH68-17982A
English (IND). 04/2008. Rev. 1.0

Installing the SIM card and battery

1. Remove the battery cover and insert the SIM card.


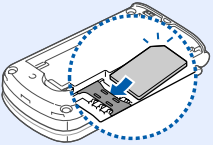
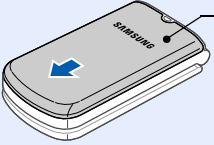


  2. Install the battery and reattach the cover.

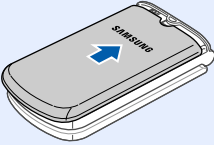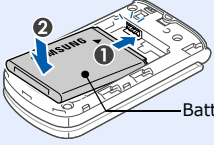


Charging the battery

   1. Plug the supplied travel adapter.

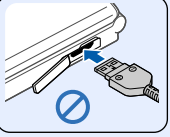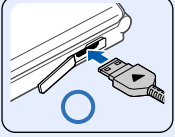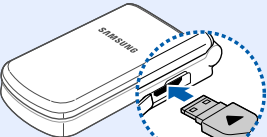

With the triangle facing up

 2. When charging is finished, unplug the adapter.

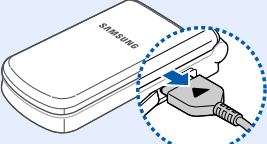

Note: Do not remove the battery from the phone without unplugging the adapter first. Otherwise, the phone may be damaged.

 
Phone layout and key functions

Web access/Confirm key
In Idle mode, accesses the web browser.
In Menu mode, selects the highlighted option or confirms input.

Soft keys
Perform functions indicated by the text above the key.

Dial key
Makes and answers a call. In Idle mode, retrieves the most recent calls.

Voice mail server key
In Idle mode, accesses your voice mail server when held down.

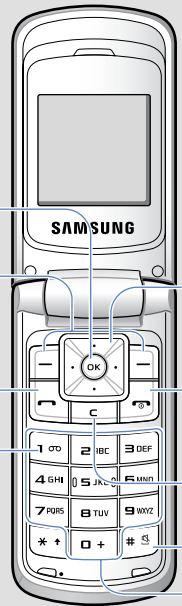

4-way navigation keys
In Idle mode, access your favourite menus directly.
In Menu mode, scroll through menu options.

Power/End key
Turns the phone on or off when held down. Also ends a call.

Cancel/Clear key
Deletes characters from the display. Returns the display to the previous menu level.

 
Silent mode key
▶ *Silent mode*

Alphanumeric keys

Silent mode ▶ Press and hold **#** in Idle mode to disable all sounds on the phone. To exit, press and hold this key again.

Display

Your phone is in Idle mode when you are not on a call or using a menu. You must be in Idle mode to dial a phone number.

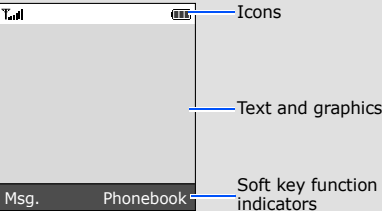

Icons

Text and graphics

Soft key function indicators

Your phone displays the following status indicators on the top of the screen:

Icon	Description
	Signal strength
	Call in progress
	GPRS network
	Roaming network
	Call ringer set to vibrate
	Silent mode
	Mute mode, during a call
	Call diverting feature active
	New text message
	New multimedia message
	New voicemail message
	Alarm set
	Battery power level

 
Switching on or off the phone

- Press and hold for more than one second to switch on the phone.

Using the menus

In Idle mode, press the **OK** key to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key () or right soft key () to perform the function indicated.

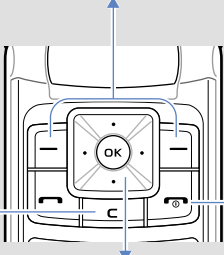

To return to the previous menu level, press the soft key or **C**.

To exit this menu without changing the menu settings, press this key.

Use the 4-way navigation keys as shortcuts to access your favourite menus.

- In Idle mode, press the **OK** key.
- Select **Phone settings** → **Short cut**.
- Select a key.
- Select a menu to be assigned to the key.

Switching on or off the phone

- Press and hold for more than one second to switch on the phone.

- If the time & date message appears, press the **Yes** soft key and set the time and date by the following onscreen instructions.
- Press and hold for more than two seconds to switch off the phone.

Changing the display language

- In Idle mode, press the **OK** soft key.
- Select **Phone settings** → **Language**.
- Select a language.

Making a call

- In Idle mode, enter an area code and phone number, and press .
- Press to end the call.

Note: In Speakerphone mode, a noisy environment will make it difficult to hear the person whom you are speaking with. In a noisy environment, it is better to use the normal phone mode for better audio performance.

Menu map

1. SIM AT*

- 2.1 Missed calls
- 2.2 Received calls
- 2.3 Dialed calls
- 2.4 Delete all
- 2.5 Call time
- 2.6 Call cost*

3. Network services

- 3.1 Call diverting
- 3.2 Call barring
- 3.3 Call waiting
- 3.4 Network selection
- 3.5 Caller ID
- 3.6 Closed user group

4. Sound settings

- 4.1 Ring tone
- 4.2 Ring volume
- 4.3 Alert type
- 4.4 Keypad tone

- 4.5 Keypad volume
- 4.6 Message tone
- 4.7 Alert on call
- 4.8 Folder tone
- 4.9 Power on/off
- 4.0 Extra tones

5. Messages

- 5.1 Text messages
- 5.2 Multimedia messages
- 5.3 Configuration messages

6. Funbox

- 6.1 FM Radio
- 6.2 Games
- 6.3 Sounds
- 6.4 Images
- 6.5 Delete all
- 6.6 Memory status

7. Applications

- 7.1 Alarm
- 7.2 Calendar
- 7.3 Time & Date
- 7.4 Calculator
- 7.5 Mobile Prayer
- 7.6 To do list
- 7.7 Voice memo
- 7.8 Currency exchange

8. Phonebook

- 8.1 Search
- 8.2 New entry
- 8.3 Group search
- 8.4 Edit group
- 8.5 Speed dial
- 8.6 Delete all
- 8.7 Copy all to
- 8.8 Move all to
- 8.9 Memory status
- 8.0 SDN*

9. Phone settings

- 9.1 Display settings
- 9.2 Greeting message
- 9.3 Own number
- 9.4 Language
- 9.5 Security
- 9.6 Extra settings
- 9.7 Short cut
- 9.8 Connection settings
- 9.9 Reset settings

* Show only if supported by your SIM card.

Entering text

Changing the text input mode

In a text input field, press the right soft key until the input mode indicator you want appears.

T9 and Hinglish DB mode

- Press **2** to **9** to start entering a word. Press each key once for one letter.

The word you are entering appears on the display. It may change with each keypress. Finish entering the word before editing or deleting any keystrokes.
 - T9 example: To enter "Hello" in T9 mode, press **4**, **3**, **5**, **5**, and **6**.
 - Hinglish example: To enter "namaste" in HG mode, press **6**, **2**, **6**, **2**, **7**, **8** and **3**.
- When the word displays correctly, go to step 3. Otherwise, press **0** to display alternative word choices for the keys that you have pressed.
- Press **#** to insert a space and enter the next word.

ABC mode

Press the keys labelled with the letter you want once for the first letter, twice for the second letter, and so on.

For example, press **2** three times to enter "C" and **5** two times to enter "K."

Number mode

Press the keys corresponding to the digits you want.

Symbol mode

Press the number keys corresponding to the symbol you want and press the **OK** soft key. You can press **Up** or **Down** to display more symbols.

Tips for entering text

- To move the cursor, press the Navigation keys.
- To delete characters one by one, press **C**. To clear the display, press and hold **C**.
- To insert a space between characters, press **#**.

- To change case in T9 mode or ABC mode, press *****.

- To enter punctuation marks in T9 mode or ABC mode, press **1**.

Using the Neopad Indian Mode

To type a character in the Neopad Hindi mode:

- Press a corresponding key to access the Virtual Keypad that contains a character you want. The character will appear in the Virtual Keypad at the bottom of display.

If you want to know which key is assigned to which Hindi characters troupe, see the table of "List of the characters available in Hindi".

- Press the corresponding key 1 to 5 to input a character, or press the ***** key to toggle a virtual keypad page to Virama.

Note: When you enter a character, you will see the predicted word in the word prediction box at the bottom of the display. If you want to know about this input method, see the page 2. Otherwise, repeat above steps to enter other characters.

List of the characters available in Hindi

Key	Characters inthe order displayed	
	Press the key	And press the * key
1 क		
2 च		
3 ट		
4 त		
5 प		
6 य		
7 ष		
8 अ		
9 ा		
0 े		
* ्	Virama (toggles a virtual keypad page)	

Key **1~7**: Consonants Groups

Key **8**: Independent Vowels Group

Key **9**: Dependent Vowels Group

Key **0**: Signs & Symbols

Example: To enter **वम** (made up of half character), press the **1**,
* (Virama), **1**, **5**, and **5** keys.
Example: To enter **क्र** (क + ि + ए), press the **1**, **1**, **9**, **2**, **8**,
* (toggles the page), and **2** keys.

Quick feature reference

This section provides brief explanations of features on your phone.

Menu	Description
Menu > SIM AT	Use a variety of additional services offered by your service provider.
Menu > Call records > Missed calls, Received calls, or Dialed calls	View the most recent calls you have dialled, received, or missed.
Menu > Call records > Delete all	Delete the call logs in each call type or all logs at once.
Menu > Call records > Call time	View the duration of recent calls you have dialled and received. Also reset the time counter.
Menu > Call records > Call cost	View the cost of your calls.
Menu > Network services	Access network services offered by your service provider.
Menu > Sound settings > Ring tone or Ring volume	Select a ringtone for incoming calls or a volume level.
Menu > Sound settings > Alert type	Select an alert type for the call ringer.

Menu	Description
Menu > Funbox > Memory status	Check the amount of memory in use for sounds and images.
Menu > Applications > Alarm	Set an alarm to sound at a specific time.
Menu > Applications > Calendar	Keep track of daily or monthly schedule.
Menu > Applications > Time & Date	Set the current time and date manually and set your local time zone.
Menu > Applications > Calculator	Perform basic arithmetic functions.
Menu > Applications > Mobile Prayer	Set an alarm to sound at a specific time. And you can change the wallpaper and ringtone by selecting the God.
Menu > Applications > To do list	Create a list of tasks and assign a deadline to each task.
Menu > Applications > Voice memo	Record voice memos and listen to them.
Menu > Applications > Currency exchange	Do currency conversions.
Phonebook > Search	Search for contacts in Phonebook.
Phonebook > New entry	Add a new contact to Phonebook.

Water resistance
Your phone is not water-resistant. Keep it dry.

Sensible use
Use only in the normal position (held to your ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls
Key in the emergency number for your present location, then press . Do not end the call until given permission to do so.

Small children and your phone
Keep the phone and all its parts including accessories out of reach of small children.

Accessories and batteries
Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorised accessories could damage your phone and may be dangerous.

	Risk of explosion if a battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
	At very high volume, prolonged listening to a headset can damage your hearing.

- Typing a word using the linguistic dictionary (Forward prediction)**
- Enter the first character of the word you want.
 - You will see a word starting with the first character you enter in the word prediction box at the bottom of the display.
 - If that word is correct, go to step.

Alternatively, press the Up or Down key to search the word you want to enter.
 - Press the  key to select it.

Example: To enter **बहुत अच्छा** (ब + ह + ु + त + space + अ + च + ् + छ + ा) using the linguistic dictionary, first press the **5**, **3**, **7**, and **3** keys and then you will see **बहुत** in the word prediction box. Press the  key to select the word.

Press the **#** key to insert a space for the next word. Press the **8**, **1**, **2**, ***** (Virama), and **1** keys and then you will see **अच्छा** in the word prediction box. Press the  key to select the word.

Menu	Description
Menu > Sound settings > Keypad tone or Keypad volume	Select a tone which the phone sounds when you press a key or a volume level.
Menu > Sound settings > Message tone	Select the alert ringtone for incoming SMS, MMS, and broadcast messages, or set how often you are informed of a new message.
Menu > Sound settings > Alert on call	Set the phone to alert you when you receive a new message or when the time for an alarm comes during a call.
Menu > Sound settings > Folder tone	Select the tone that the phone sounds when you open or close the phone.
Menu > Sound settings > Power on/off	Select the melody that the phone sounds when it is switched on or off.
Menu > Sound settings > Extra tones	Set additional tones for the phone.
Menu > Messages > Text messages or Multimedia messages > Inbox, Outbox, or Draft	Read received, sent, or saved messages.

Menu	Description
Phonebook > Group search	Search for Phonebook contacts in caller groups.
Phonebook > Edit group	Select a ringtone and image for incoming calls and messages from members of a group. Also change the group name.
Phonebook > Speed dial	Assign speed dial numbers (2 to 9) for eight of your most frequently dialled numbers.
Phonebook > Delete all	Delete all Phonebook contacts stored in the phone's memory, on the SIM card, or both.
Phonebook > Copy all to, Move all to	Copy or Move all of the contacts stored on the SIM card to the phone's memory, or vice versa.
Phonebook > Memory status	View the total number of Phonebook contacts in the phone's memory or on the SIM card.
Phonebook > SDN	Access the list of service numbers assigned by your service provider.
Menu > Phone settings > Display settings	Change settings for the display and backlight.
Menu > Phone settings > Greeting message	Enter the greeting message to be displayed when the phone is switched on.
Menu > Phone settings > Own number	Check your phone numbers or assign a name to them.

Qualified service
Only qualified service personnel may repair your phone.

Correct disposal of this product
(Waste Electrical & Electronic Equipment)
 (Applicable in the European Union and other European countries with separate collection systems)
 This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

- List of the combination of half and full formed consonant**
- | | |
|---------------------------|--------------|
| क् + क = क्क | त् + न = त्न |
| क् + क् + क = क्क्क | द् + ध = द्ध |
| स् + थ् + य = स्थ्य | ध् + द = ध्द |
| स् + म् + थ् + क = स्मथ्क | द् + य = द्य |
| ट् + र = ट्र | द् + म = दम् |
| ग् + र = ग्र | श् + च = श्च |
| र् + ग = र्ग | श् + र = श्र |
| त् + त = त्त | |
| द् + द = द्द | |

Adjusting the volume

- In Idle mode, press the **OK** soft key.
- Select **Sound settings** → **Ring volume**.
- Press **Up** or **Down** to adjust the volume level.
- Press the **OK** soft key.

While a call is in progress, press **Up** or **Down** to adjust the earpiece volume.

Menu	Description
Menu > Messages > Text messages or Multimedia messages > Write new	Create and send messages to other mobile phones.
Menu > Messages > Text messages or Multimedia messages > Templates or Emoticon templates	Preset templates of frequently used messages or emoticons.
Menu > Messages > Text messages or Multimedia messages > Settings or Setup	Set options for using messaging services.
Menu > Messages > Text messages or Multimedia messages > Delete all	Delete messages in each message box or all messages at once.
Menu > Messages > Text messages or Multimedia messages > Memory status	Check memory information for messages.

Menu	Description
Menu > Phone settings > Language	Select a language to be used for the display text.
Menu > Phone settings > Security	Protect the phone against unauthorised use.
Menu > Phone settings > Security > Mobile Tracker	Track your phone when it is stolen or lost. When someone tries to use your phone with other SIM card, the phone will automatically send the preset tracking message to your family or friends. This feature may be unavailable due to certain features supported by your service provider.
Menu > Phone settings > Extra settings	Set the automatic redialling feature or the answering method.
Menu > Phone settings > Short cut	Set the Navigation keys as shortcuts to access your favourite menus directly.
Menu > Phone settings > Connection settings	Create and customise the profiles containing the settings for connecting your phone to the network.
Menu > Phone settings > Reset settings	Reset the phone to the factory default settings.

SAR information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the European Union (EU) Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit set by the EU Council is 2.0W/kg. The highest SAR value for this model phone was 0.729 W/kg.

Sending an SMS message

- In Idle mode, press the **OK** soft key.
- Select **Messages** → **Text messages** → **Write new**.
- Enter the message text.

Note: If you enter Uni-code or Hindi characters, the maximum number of characters allowed will be reduced by half.

- Press the **Options** soft key and add items using the following options:
 - Add objects**: add sounds, images, or animated images.
 - Add templates**: add text templates.
 - Add emoticon**: add emoticons.
 - Add phonebook**: add Phonebook contacts.

- Press the **Options** and select **Send only** or **Save and send**.
- If you select **Save and send**, select a memory location.
- Enter destination numbers.
- Press the **Options** soft key and select **Send message** to send the message.

Menu	Description
Menu > Messages > Multimedia messages > MMS profile	Select or configure a connection profile to be used for MMS.
Menu > Messages > Text messages > Voice mail	Access your voicemail server and listen to messages on the network.
Menu > Messages > Text messages > Broadcast	Change settings for the service and access broadcast messages.
Menu > Messages > Configuration messages	Access or delete messages containing network parameters from your service provider.
Menu > Funbox > FM Radio	Listen to music or news via the FM radio on your phone. First, you must connect your phone with the headset, which serves as a radio antenna.
Menu > Funbox > Games, Sounds, or Images	Access games, sounds, or images in your phone's memory.
Menu > Funbox > Delete all	Delete games, sounds, or images in each media box, or all media files at once.

Important safety precautions

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Drive safely at all times
Do not use a hand-held phone while driving; park your vehicle first.

Switching off when refuelling
Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switching off in an aircraft
Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switching off near all medical equipment
Hospitals and health care facilities may be using equipment that could be sensitive to external RF energy. Follow any regulations or rules in force.

Interference
All wireless phones may be subject to interference, which could affect their performance.

Special regulations
Follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it.