

SIEMENS

Be inspired

Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 Munich

© Siemens AG 2003
All rights reserved. Subject to availability.
Rights of modification reserved.

Siemens Aktiengesellschaft
www.my-siemens.com



M55

Safety precautions	2	 Profiles	44
Overview of the phone	4	 Organiser	45
Display symbols (selection)	6	Calendar	45
Getting started	8	Alarm	45
Switch on, off / PIN entry	10	Tasks	45
Switching on for the first time	10	Notes	45
Signal strength	11	Dictating machine	46
General instructions	12	Time zones	46
Security	13	 Extras	47
Codes	13	Alarm clock	47
Preventing accidental		Calculator	47
activation	14	Currency conv	47
Calling	15	Stopwatch	47
Text entry	18	Countdown	48
Highlighting mode	21	Camera (Accessories)	48
 Default book	22	Voice command	49
Phonebook	23	Fast access key/My menu	50
Addressbook	24	 Filesystem	51
Voicedialling	25	Send...	52
Groups	26	Questions & Answers	53
 Records/Duration/Charges	27	Customer care	56
 Voice message/CB services 28		Care and maintenance	58
 Message lists/profiles	29	Product data	59
 SMS	30	SAR - European Union (RTTE) ...	60
 MMS	31	SAR - International (ICNIRP)	62
 E-mail	32	Battery quality statement	63
 Surf & fun	33	Guarantee certificate (UK)	64
Internet browser (WAP)	33	Guarantee certificate (IRL)	65
Games & more	34	Index	67
 Setup	36		

This is a short version of the user guide.
 The more detailed version is available:
www.my-siemens.com/m55

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



The ringtone (p. 37), info tones (p. 37) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (p. 16). Otherwise you risk serious permanent damage to your hearing.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Only use original Siemens batteries (100 % mercury-free) and – charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



The SIM card may be removed. Caution! Small parts like this could be swallowed by young children.



Do not open the phone. Only the battery (100 % mercury-free) or SIM card may be replaced. You must not open the battery under any circumstances. Any other changes to this device are strictly prohibited, as they will invalidate the type approval criteria required for operation of the unit.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.

Important:



Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee!

① Call key

Dial phone number/name displayed, take calls. Show last phone numbers dialled in standby mode.

② On/Off/End key

- Switched off: hold **down** to switch on.
- During a conversation or in an application (except for Surf & Fun): press **briefly** to finish.
- In menus: press **briefly** to go back a level. Hold **down** to return to standby mode.
- In standby mode: hold **down** to switch off phone.

③ Control key

In lists and menus:



Scroll up/down.



Select function.



Menu level back.

During a call:



Open call menu.

In standby mode:



Voice control (hold down).



Open Addressbook/Phonebook.



Open menu.



GPRS info.



① Integrated antenna

Do not interfere with the phone above the battery cover unnecessarily. This reduces the signal quality.

② Loudspeaker

③ Display icons

Signal strength/ GPRS available/ battery level.

④ Soft keys

The current functions of these keys are shown in the bottom line of the display as text/symbol (e.g.).

⑤ Input keys

Numbers, letters

⑥ Hold down

- In standby mode: switch all audible signals on/off (except alarm).
- For incoming calls: only switch off ringtones.

⑦ Hold down

In standby mode: switch key lock on/off.


⑧ Microphone

⑨ Dynamic Light

Two LEDs on each side indicate different functions visually (set, p. 38).

⑩ Device interface

Connection for charger, headset etc.

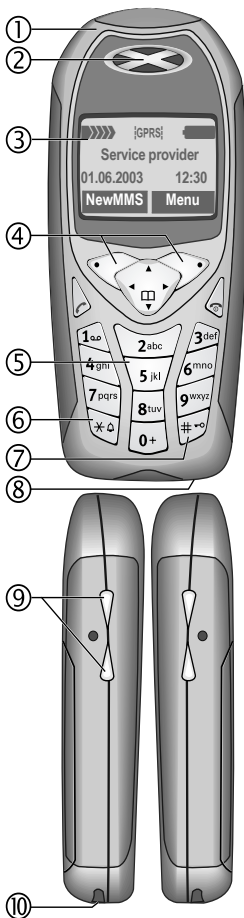

Display symbols



Signal strength.



Charging.

Battery charging status,
e.g., 50 %.

Phonebook/Addressbook



Records



Surf & Fun



Organiser



Messages



Profiles



Extras



File system



Settings



All calls are diverted.



Ringer off.



Short ring (beep) only.

Ringer only if caller is stored in
Phonebook/Addressbook.

Alarm set.



Alarm clock activated.



Key lock activated.

Phone numbers/names:



On the SIM card

On the SIM card
(PIN2 protected).

In the phone memory.



No network access.



Function activated/deactivated.



Phonebook/Addressbook.

Indicates whether upper or lower-
case letters are active.Text input **with** T9.

Activated and available.



Registered.



Temporarily interrupted.



GPRS download.



WAP online.



WAP via GPRS online.



WAP no network.



Headset mode.



Auto answer feature on.

Organiser/Extras symbols



Memo.



Call.



Appointment.



Dictating mach./Voice memory.



Birthday.



Alarm clock/stopwatch.

Depending on the service provider, some of the symbols shown here may vary from those in the phone.

Soft keys



Message received.



MMS received.



MMS notification received.



Voice mail received.



Data received.



Picture received.



Melody received.



Unanswered call.



Store in Phonebook/
Addressbook.



Retrieve from Phonebook/
Addressbook.




Change Phonebook/
Addressbook.


Insert SIM card/battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.


- Remove cover upwards in the direction of the arrow ①.

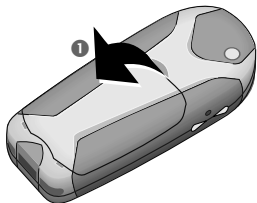


- Insert the SIM card in the opening with the contact area **facing downwards** and push gently until it engages below the holder (make sure the angled corner is in the correct position ②).

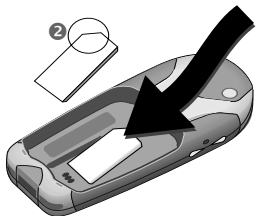

- Insert the battery sideways into the phone ③, then press downwards ④ until it engages.

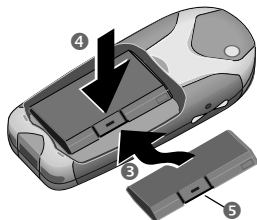

- To remove, press the retaining tab ⑤ then lift the battery out.
- Insert the cover in the lower edge ⑥, then press downwards ⑦ until it engages.

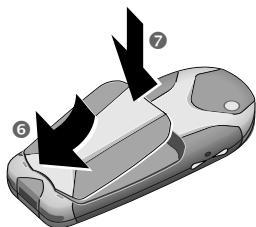


Additional information

Always switch off your phone before removing the battery!

Only 3V SIM cards are supported. Please contact your service provider if you have an older card.

Charge battery

The battery is not fully charged when delivered. Plug charger cable into the bottom of the phone, plug power supply unit into a mains power socket and charge for at least two hours.

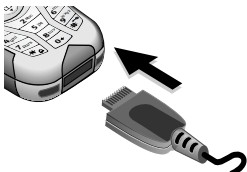

Display when charging is in progress



During charging.

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to +40 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

Note

Your phone's display is delivered with a protective film.

Remove this film before getting started.

Electrostatic charging can in rare cases lead to discolouring at the edge of the display. This will, however, disappear of its own accord after 10 minutes at the most.

Charge symbol not visible

If the battery has been discharged fully the charge icon is not visible when the charger is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3–4 hours.

Only use the charger provided!

Display while in service

Charge level display during operation (empty-full):



A beep sounds when the battery is nearly empty. The battery level is only shown correctly during an unbroken charging/discharging cycle. You should therefore **not remove the battery unnecessarily** and where possible **not finish the charging process early**.

Additional information

The charger heats up when used for long periods. This is normal and not dangerous.

Operating times

A full battery will deliver 60 to 250 hours of standby time or 100 to 300 minutes of talktime.

Switch on/off




Hold **down** On/Off/End key to switch on or off.

Enter PIN

The SIM card can be protected with a 4- to 8-digit PIN.



Enter the PIN using the number keys. The characters **** appear to ensure nobody can read your PIN on the display. Correct errors with **Clear**.

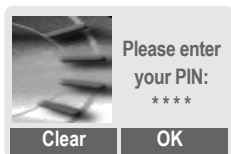

OK

Confirm entry with right soft key. Logging on to the network will take a few seconds.

Additional information

Change PIN	p. 13
Change the standard directory	p. 22
Other network	p. 42
Clear SIM card barring	p. 14

Switching on for the first time

Time/date

The clock must be set to the right time once at start-up.

Yes

Press.



First enter the date (day/month/year), then the time (24 hours, including seconds).

OK

Press. The time and date are updated.

Time zones

Set the time zone for your area.



Select the required time zone from list ...

Set

... and set.

Additional information

If the battery is removed for longer than 30 seconds, the clock must be reset.

Additional clock settingsp. 40.

Phonebook or Addressbook

You can choose whether you want to use the **Phonebook** on the SIM card or the internal **Addressbook** as standard.

You can copy the SIM card Phonebook to the Addressbook on the phone. Please **do not interrupt this procedure**. During this time **do not accept incoming calls**. Follow instructions in the display.

To copy data on the SIM card at a later time, highlight entries (p. 21) and copy these with the function **Copy into**  (Phonebook options menu).

You can change the standard index at any time (p. 22).

Signal strength



Strong receive signal.




A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the soft key **SOS** you can make an emergency call on any network **without** a SIM card and without entering a PIN (not available in all countries).

Standby mode

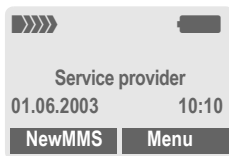

When the name of the service provider appears on the display, the phone is in **standby mode** and **ready for use**.

The left soft key may have different functions pre-assigned.



Hold **down** the On/Off/End key to return to standby mode from any situation.

User guide

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key.



Call key.



Press the control key on the side indicated.



Soft keys

Menu

Displays a soft-key function.



Function dependent on service provider, may require special registration.

Menu controls

In the user guide the operational steps are presented in a **shortened form**, e.g. to display call list for missed calls:

Menu → → **Calls missed**


This corresponds to:

Menu

Open menu.

From standby mode: press **right** soft key.

2

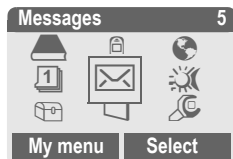

Select

Select **Records**

Press the **right** soft key to open the **Records** submenu.

Select

Press the **right** soft key to open the **Calls missed** list.



Scroll to the required entry.

View

Press the **left** soft key to display phone number with date/time.

Codes

The phone and SIM card are protected by several security numbers (codes).

Keep these confidential numbers in a safe place where you can access them again if required.

Menu →  → **Security**
→ **Codes**
→ Select function.

PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.

Select Press.



Enter PIN.

OK Confirm input.

Change Press.

OK Confirm.

Change PIN

You can change the PIN to any 4 to 8 digit number you find easier to remember.



Enter **current** PIN.



Press.



OK Enter **new** PIN.



OK Repeat **new** PIN.

Change PIN2

(Display only if PIN2 is available).
Proceed as with **Change PIN**.

Chg.phonecode

(Change phone code)

You define the phone code (4–8 digits) when calling up a phone-code protected function for the first time. It is then valid for all phone-code protected functions. Following the third incorrect attempt, access to the phone code and the functions that use it is denied. If this happens please contact Siemens Service (p. 56).

Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN), provided by your service provider with the SIM card, according to instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN entry is deactivated, confirmation is required to switch on the phone. This prevents the phone from being switched on accidentally.



Hold **down**.



Press. The phone switches on.

Dialling with number keys

The phone must be switched on (standby mode).



Dial number (always with area code, if necessary with international dialling code).

Clear A **short** press clears the last digit, a **long** press clears the entire phone number.



Press the Call key to dial the number.

End call



Press End key **briefly**.

The call is ended. Press this key even if the person on the other end of the line has hung up first.

Set volume



Use the control key (top) to start adjusting the volume (only possible during conversation).



Set volume and confirm with **OK**.

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.

Redial previous numbers

To redial numbers that were dialled previously:



Press the Call key once.



Pick out the required phone number from the list, then press ...



... to dial.

If the number is busy

Auto. redial

Auto dial

The phone number is automatically dialled ten times at increasing time intervals.

Or

Call back

Call back

Your phone rings when the engaged number is free.



Reminder

Prompt

A beep reminds you to redial the displayed phone number after 15 minutes.

International dialling code

In standby mode, to insert international dialling codes from the list:



Hold **down** until a "+" is displayed. This replaces the first two digits of the international dialling code.

+List

Press and select country.

Accept call

The phone must be switched on (standby mode). An incoming call will interrupt any other use of the phone.

Answer or 

If the phone number has been transmitted by the network, it is displayed. If the caller's name also appears in the Phonebook or AddressBook, this will appear instead of the number. If set, a picture can be displayed instead of the bell icon.

Additional information

 Save phone number	p. 23, p. 24
Voice dialling	p. 25
Key lock	p. 38
Accept call using any key	p. 38

Warning!

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing caused by a loud ringtone!

Reject call

Reject Press briefly.

Handsfree

You can put the phone aside during a call. You can then hear the caller via the loudspeaker.

Handsfr. Activate handsfree talking.

Yes Switch on.



Use the control key to adjust the volume.

Handsfr. Switch off.

Warning!

Always switch off "handsfree talking" before holding the phone to your ear! This will avoid damage to hearing!

Swapping calls



- You can call another number during a call.

menu Open call menu

Hold Put current call on hold.

Now dial the new phone number. When the new connection is established:

menu Open call menu

Swap Swap back and forth between both calls.

- You may be advised during a call that there is another call waiting by a special "call waiting" tone (p. 39).

Swap Accept the waiting call and put the current call on hold. To swap between the two calls, see above.

Or



End the current call.

Answer Accept the new call.

Conference



Call up to 5 parties and link them together in a conference call. When a call is established:

menu Open menu and select **Hold**. The current call is put on hold.



Now dial a new number. When the new connection is established ...

menu ... open menu and select **Conference**. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).

End



All calls in the conference are ended simultaneously when the End key is pressed.

Text entry without T9

Press number key repeatedly until the required letter appears. The cursor will jump forward after a brief interval. Example:



Press briefly once for **a**, twice for **b** etc. The first letter of a name is automatically written in upper case.

Hold down to write the number.

Ä,ä,1-9

Umlauts and numbers are displayed after the relevant letters.

Clear

Press briefly to delete the letter before the cursor, **hold down** to erase the whole word.



Move the cursor (forwards/back).



Press briefly: Swap between: **abc**, **Abc**, **T9abc**, **T9Abc**, **T9ABC**, **123**. Status shown in top line of display.

Hold down: All input modes are displayed.

Press briefly: Select special characters.

Hold down: Open input menu.



Press once/repeatedly:

.,?!' " 0 - () @ / : _

Hold down: Writes 0.

Writes blank. Press twice = jumps a line.



Special characters



Press **briefly**. The symbols chart is displayed:

1)	¿	i	_	;	.	,	?	!	+	-
"	'	:	*	/	(	)	¤	¥	\$	£
€	@	\	&	#	[	]	{	}	%	~
<	=	>		^	§	Γ	Δ	Θ	Λ	≡
π	Σ	Φ	Ψ	Ω						

1) Line skip



Navigate to character.

Select

Press.

Input menu

With text input:



Hold down. The input menu is displayed:

Text format (SMS only)

Input language

Mark text

Copy/Add



Text input with T9

"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Activate, deactivate T9

Options Open text menu, select **T9 input**, then **T9 preferred**.

Edit Activate T9.

Select Input language

Select the language in which you want to compose your message.

Options Open text menu, select **T9 input**, then **Input language**.

 
Select Confirm. The new language is set.

Write a word using T9

Since the display changes as you proceed, it is best if you finish a word without looking at the display.

Simply press the keys **once only** where the relevant letter is located. For "hotel", for example:

 press briefly for **T9Abc** then type



Press. A blank ends a word.

Do not use special characters such as Å but rather use the standard characters, e.g. A; T9 will do the rest for you.

Additional information



Set a full stop. A word is concluded if it is followed by a space. Within a word, a full stop represents an apostrophe or hyphen:

e.g., **provider.s** = provider's.



Go to the right. Ends a word.



Press briefly: Swap between: **abc, Abc, T9abc, T9Abc, T9ABC, 123**. Status shown in top line of display.

Hold down: All input modes are displayed.



Press briefly: Select special characters (p. 18).

Hold down: Opens input menu (p. 18).

T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first.

The word must be **highlighted**. Then press



again. The displayed word is replaced with a different word. If this is also incorrect, repeat until the correct word is displayed.

To add a word to the dictionary:

Spell Select.

Now write the word without any T9 support and save it in the dictionary with **Save**.

Correct a word

Words written **with** T9:



Move left or right, word by word, until the required word is **highlighted**.



Scroll through the T9 word suggestions again.

Clear

Deletes the character to the left of the cursor **and** displays a new possible word!

Words **not** written with T9:



Move letter by letter to the left/right.

Clear

Deletes the letter to the left of the cursor.



Letters are inserted at the cursor position.

T9® Text Input is licensed under one or more of the following:

U.S. Pat. Nos. 5, 818, 437, 5, 953, 541,
5, 187, 480, 5, 945, 928, and 6, 011, 554;
Canadian Pat. No. 1,331,057;
United Kingdom Pat. No. 2238414B;
Hong Kong Standard Pat. No. HK0940329;
Republic of Singapore Pat. No. 51383;
Euro.Pat. No. 0 842 463 (96927260.8)
DE/DK, FI, FR, IT, NL, PT, ES, SE, GB;
and additional patents are pending worldwide.

Text modules

Text modules can be stored in the phone for adding to your messages (SMS, MMS, e-mail).

Write text modules

Menu →  → Text modules

Options Select **New entry**.



Write text module.

Options Select **Save**.

Accept the default name or give it a new name, then save with **OK**.

Use text modules



Write message (SMS, MMS, e-mail).

Options Open text menu.



Select **Text modules**.



Select text module from the list.


Select Confirm. The text module is displayed.

Select Confirm. The text module is inserted in the message to the right of the cursor.

With some applications (e.g. Addressbook) one or more entries in a list can be highlighted to carry out a function jointly.

Options Open menu.

Mark text Activate highlighting mode.

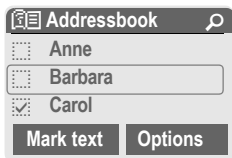

If an **unmarked** entry is selected, this can be highlighted:

Mark text The current entry is highlighted.

If a **highlighted** entry is selected, the highlighting can be deleted:

Unmark Unmark the current entry.

Highlighting functions in options menu:

Options Open menu.

Mark all Highlight all entries.

Unmark all Delete highlighting on all marked entries.



→ Select function.

Show entries

Entries in the standard directory (Addressbook or Phonebook) are shown for selection.



Select a name with the first letter and/or scroll.



The number is dialled.

<New entry>

Create new entry in standard directory.

Phonebook (p. 23)

Addressbook (p. 24)

Default book

Select either Phonebook or Addressbook as your standard directory. Your preference should be for the Addressbook, because more entries and functions (e.g. pictures, birthdays, several phone numbers per entry, etc.) are possible.



Select **Phonebook** or **Addressbook**.



Set as standard.

Groups

(see p. 26)

Businesscard

Create your own business card. Send it as an SMS to another GSM-phone.

If no business card has been created yet, you will be asked for your input.



Move from field to field to put in your details.

Last name:	E-mail 2:
First name:	URL:
Phone:	Company:
Phone/office:	Street:
Phone/mobile:	Post code:
Fax:	City:
Fax 2:	Country:
E-Mail:	Birthday:



Press.

Additional information

The content of the business card corresponds to international standards (vCard).



Copy numbers from Addressbook/Phonebook.



Addressbook menu.

Service numbers

Service phone numbers are stored here in accordance with the respective service provider.


Entries in the Phonebook (on the SIM card) are managed separately from those in the Addressbook.

<New entry>

If the Phonebook is set as standard:



Open Phonebook (in standby mode).

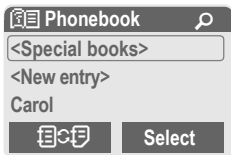

Select <New entry>.

Select

Press.



Navigate between and fill in the input fields. The max. number of letters available is shown in the display.

Number: Always enter phone number with dialling code.

Name: Enter first and/or last names.

Location: Select the storage location **SIM** or **Protected SIM** (PIN2 required).

Record no.: Is automatically assigned to the entry.

Save Press to store the new entry.

Call, search for an entry



Open Phonebook and select name.



Number is dialled.

Change entry



Select entry in Phonebook.

Options

Press, select **Change**. To store your changes **Save**.

Additional information

<Special books>:

<Own numbrs>: enter personal phone numbers, <VIP numbers>: assign important numbers to group, <SIM phonebook>, <Protected SIM>, <Service numb.>.



Temporary switch to Addressbook.

Options

Edit entries, for example exchange data between the Phonebook and the Addressbook.

Text entryp. 18

The Addressbook can store up to 500 entries that are managed in the phone memory.

<New entry>

If the Addressbook has been selected as standard:



Open Addressbook (in standby mode).

Select

Press.



Group

Enter first and/or last name.

Organise entries by groups. Select with **Change**.



Make further entries field by field.

Phone:	URL: (Internet address)
Phone/office:	Company:
Phone/mobile:	Street:
Fax:	Post code:
Fax 2:	City:
E-Mail:	Country:
E-mail 2:	Birthday:

Bitmap

Select

Assign a picture to an Addressbook entry. It is displayed if you are called by the corresponding phone number.

All fields

Select

Show all input fields if the display was previously reduced
(**Options** → **Field setup**)

Save

Save the entry.

Call, search for an entry



Open Addressbook (in standby mode).



Select a name with the first letter and/or scroll.

The number is dialled.

If several numbers have been saved in an Addressbook entry:



Select phone number.



The number is dialled.

Right soft key:

When you scroll through an entry, the right soft key will change, depending on the input field:

VoiceDial	Voice dialling menu (p. 25).
E-mail	Create e-mail (p. 32).
Link	Visit URL (p. 33).
Show	Display respective picture.

Change/read entry




Open Addressbook (in standby mode).



Select required entry.

View

Press.

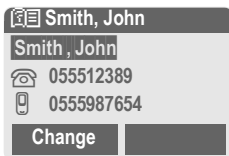

Select input field.

Change

Open entry.



Make changes.

Save

Save setting.

Additional information

<Groups> Group functions p. 26

Temporary switch to Phonebook.

Information on text entry p. 18

Options Edit entries, for example to record voice dialling.

Birthday After activating the "Reminder box" enter the time for the reminder. The phone will remind you with an acoustic tone and also with a display one day before the birthday and on the birthday.

Voicedialling

Dial numbers by voice command. Up to 20 recorded names for voice dialling or voice commands (p. 49) can be saved on the mobile (not on the SIM card).

Record



Open Addressbook (in standby mode).



Select a name with the first letter and/or scroll.

Options

Open menu.

Voicedialling

Select.



Choose phone numbers if there are more than one.

Record

Press.

Start

Start recording.

A short signal sounds. Now speak the name. After a second beep and message in the display, **repeat** the name. A beep now confirms the recording, which is saved automatically.

Apply voice dialling



Hold **down**. Start voice dialling (in standby mode).

Now speak the name. The number is dialled.

Additional information

Noisy environments may affect voice recognition. If attempt was unsuccessful, press the control key once more and repeat the name.

Groups

Nine groups are specified in your phone to enable you to arrange your Addressbook entries clearly. You can rename seven groups.



Open Addressbook (in standby mode).

<Groups> Select (the number of entries is listed behind the group name).



E.g., select **Business**.

Options

Open menu.

Rename group

Select and give group a name.

Additional information

SMS to group p. 30.

No group: Contains all Addressbook entries that do not belong to a group (name cannot be changed).

Received: Contains vCard Addressbook entries received by SMS (name cannot be changed).

Group symbol

Assign a symbol to a group that appears on the display when one of its members calls you.



Select group.

Options

Open menu.

Group symbol

Select.



Select a symbol, then confirm with **OK**.

Your phone stores the phone numbers of calls for convenient redialling.



Select

Press.



Select call list and press

Select.



Select phone number.



Dial phone number.

Calls missed



The phone numbers of calls that you have not accepted are stored for call-back purposes if the network supports the "Caller Identity" feature.



Symbol for a missed call.

Calls received



Accepted calls are listed if the network supports the "Caller Identity" feature.

Calls dialed

Access to the last numbers dialled.



Fast access in standby mode.

Erase records

The contents of all call lists are deleted.

Call list menu

Options

Edit entries.

Durat/charges

You can display the charges and the duration of calls and set a unit limit for outgoing calls.

Menu →  → **Durat/charges**

Select a function:

Last call, All calls, Remain. units

Select Show data.

Reset Reset display.

OK End display.

Charge settings

Menu →  → **Durat/charges**
→ **Charge sett.**

Conv. (PIN 2 prompt). 

Currency for charge display.

Personal rate (PIN 2 prompt). 

Charges per unit/period.

A/c limit (PIN 2 prompt). 

Fix a credit/usage period on a special SIM card.

Auto display

Display duration and charge automatically at end of each call.



Voice mail/mailbox

Menu → → Setup
→ Voice message

Most service providers supply an external voice mail service. A caller may leave a voice message for you in this mailbox

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- or if you are making a phone call.

Some have to register for this service with the service provider and enter the settings manually.

Settings



The service provider supplies you with two phone numbers:

Save mailbox number

Call this phone number to listen to the voice mails left for you.

Menu → → Setup
→ Voice message

Enter mailbox number and confirm with **OK**.

Save call divert number

Calls are diverted to this phone number.

Menu → → Phone setup
→ Divert
→ e.g., Unanswered → Set

Dial divert number and register it at the network with **OK**. Divert will be confirmed after a few seconds. Further information on call divert can be found on p. 39.

Listening to message



A new voice mail can be displayed as follows:

An icon with beep or a text message announces a new voice mail or you receive a call with an automatic announcement. Call your mailbox and play the message(s) back.



Hold **down** (if necessary enter mailbox number once only). Confirm with **OK** and **Mailbox** depending on your service provider.

CB services

Menu → → Setup
→ CB services

Some service providers offer information services (info channels). If reception is activated, your "Topic list" will supply you with messages on the activated topics.



You can use your mobile phone to send and receive messages via SMS, MMS and e-mail.



→ Select message type.

Message lists

All messages are stored in four different lists, with a separate archive also available for SMS:

Inbox



→ Select message type.

The list of SMS messages received is displayed.

Draft



→ Select message type.

The list of stored drafts is displayed.

Unsent



→ Select message type.

The list of messages not yet successfully transmitted is displayed.

Sent



→ Select message type.

The list of messages sent is displayed.

Options

You can use comprehensive function menus to edit the messages.

Message profiles



→ Select message type.

Profiles or e-mail accounts can/must be established for each message type. The transmission characteristics are defined in these. The data for these may already have been entered. If not, your service provider will supply you with the relevant information. You will also find further information in the detailed user guide in the Internet under:

www.my-siemens.com/m55

The settings for **Voice message** and **CB services** are described in a separate chapter (see p. 28).

You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "normal" SMS messages (note higher charges).

Additionally you can insert pictures and sounds in an SMS.

Write and send text messages (SMS)

Menu →  → **New SMS**



Write text (for text entry see p. 19).



Press.



Dial number or pick out from the Phonebook/Addressbook



Confirm. Send the SMS to the service centre for transmission.

Read SMS



Arrival of new SMS announced on display. To read the SMS, press the left soft key.



Scroll through message line by line.



Functions for a direct reply.

SMS archive

Menu →  → **SMS archive**

The list of SMS messages stored in the phone is displayed.

Special functions

Options Open options menu:

SMS to group

Send SMS as a "circular" to a group:

Send Select.

Groups Press. In the Addressbook that now opens, highlight entries/groups that are to receive a message.

Picture&sound

Insert pictures and sounds into message.

Picture&sound

Select. The menu contains:

Fix animations, Fix sounds, Own anim., Own pictures, Own sounds



Select section, then select entry wanted and confirm.

Text modules

Text modules

Use text blocks (p. 19).



The **Multimedia Messaging Service** enables you to send texts, pictures (even photos) and sounds in a combined message to another mobile phone or to an e-mail address.

Depending on the setting you will either receive the complete MMS or only a notification with sender details and size. The actual MMS can then be downloaded manually later.

Pictures and **graphics** can be created using optional accessories, such as digital cameras (JPEG, WBMP or GIF format).

Music is sent and received in a MIDI file, single tones/sounds in an AMR file.

Write/send MMS messages

Menu →  → **New MMS**

An MMS consists of the address header and the content.

Create MMS Select.

Input fields

To/Cc:  /  Phone number/e-mail address of recipient(s).

Subject: Enter heading.

Picture: **Insert** The picture list is opened for selection.

Text: **Edit** Write text with the help of T9.

Sound: **Insert** Select a melody.

Slide duration

Enter length of display for individual pages (minimum 0.1 seconds).

Attach extra pages

Options Open menu.

New slide Select.

Attach business card/appointment

Options Open menu.

Extras Select.



Scroll to **Businesscard** or **Appointment**.



 Attach business card or appointment.

Receive/read MMS



 Display indicates a new MMS. Depending on profile setting (p. 29):

- Receive complete MMS.
- Open the notification. Press **Receiving** to receive the complete MMS. **Play** automatically shows the MMS. Cancel using any key. Functions for editing the MMS can be found under **Options**.

Your phone has its own e-mail program (client). You can use it to create and receive e-mails.

Write/send e-mails

Menu →  → **New e-mail**

Enter e-mail address

 /  **To:/Cc:/Bcc:** E-mail address of recipient(s).

Attach.: Copy from file system and attach.

 Press **briefly** to write special characters such as @ (p. 18).

 **Subject:** Enter heading.

 **Content:** Enter text (see also p. 19).

Options Open menu.

Send Send e-mail.

Add attachments

A file from the file system (e.g., ringtone) can be inserted in an e-mail as an attachment.

Attach. Open file system.

 Select file to be inserted.

Mark Highlight file.

OK Copy file as an attachment.

Receive e-mail

Menu →  → **Inbox**
→ **Receive e-mail**

Before an e-mail can be read, it must be retrieved from the server. The service provider is dialled with the default access profile and all e-mails are transmitted to the inbox list (p. 29).

Read e-mail

Menu →  → **Inbox** → **E-mail**

 Select e-mail.

View The e-mail is displayed.

The left soft key offers different functions depending on which text area you have selected:

 E-mail addresses/phone numbers in the message are **highlighted** and can be stored in the Address-book.

 Dial phone number or start new e-mail.

Save Save attachment.

Reply Reply to sender.

Link Start WAP browser and visit URL (p. 33).

Internet browser (WAP)

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

Internet access



Menu →  → Internet

The browser is activated as soon as you call up the function. The functions of the soft keys vary, depending on the internet page, for example "link" or "menu". The contents of the option menus are also variable.

If necessary set how the Internet access should be made. To activate:



select settings/start with

Additional information



Open the browser menu.



Offline.



Online.



GPRS Online.



No network.



To select special characters, such as @, ~, \, see p. 18.

or



press repeatedly for:

., ? ! ' " 0 - () @ / : _

End connection



Hold **down** to clear down the connection and to close the browser.

WAP profiles

Menu →  → Internet
→ Profiles

Preparation of the phone for WAP Internet access depends on your service provider. If the settings have already been made by the service provider, select/activate the profile. If the access profile has to be set manually, contact your service provider for details, if necessary.

Activate WAP profile

You can change the active profile each time before you access the Internet (if the profile has been set already).



Select profile, then **Select**.

Set WAP profile

Up to 5 WAP profiles can be set (if not barred by provider). The entries may vary depending on the service provider:



Select profile, then **Edit**.
Now fill in the data fields.

To select the connection profile, see **Data services**, p. 40.

Games & more

Download games and other applications. Once you have selected a game or application you can start to download it immediately. Then you can use the application. Most applications include instructions.

Applications and games can be found at: **wap.my-siemens.com** or on the Internet under: **www.my-siemens.com/city**

Games and applications

Applications and links that are already stored on the phone are found under:

Menu →  → **Games & more**

Different functions are available depending on the entry:

☆ **Execute game/application offline**

Select Runnable application can be started immediately.

☆ **Load game/application online**

Select Only description file; application must be downloaded first.

Load link (optional)

Select The selected Internet page is loaded.

HTTP profiles

Menu →  → **Games & more**

Options Open menu

HTTP profile Select.

Preparation of the phone for WAP Internet access depends on your service provider. If the settings have already been made by the service provider, select/activate the profile. If the access profile has to be set manually, contact your service provider for details, if necessary.

WAP can be used to download applications from the Internet. Downloading or running applications will not affect or change the software already installed on your Java™-enabled mobile phone. Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications or software and for any direct damage or consequential damage of whatever nature resulting from the use of these applications or software. For technical reasons, such applications or software and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired. In these cases the purchaser will need to download the application again or re-enable it. Siemens does not offer any warranty, or guarantee or accept any liability for the customer's ability to download or enable applications again or to do so free of charge. Save your applications on a PC using Siemens Data Suite Software, see www.my-siemens.com/m55.

Display

Menu →  → **Display**
→ Select function

Language

Set the language of the display text. "Automatic" will set the language of your home service provider. To return to this language in standby mode:

***#0000#** 

T9 input

(see also p. 19)

T9 preferred

Activate/deactivate intelligent text entry.

Input language

Select language for text entry.

Wallpaper

Set background graphic for display.

Logo

Choose picture to be displayed instead of the provider logo.

Additional logos:

www.my-siemens.com/logos

Color scheme

Select colour scheme for the whole service system.

Screensaver

The screensaver shows a picture in the display when a period set by you has elapsed. The function is ended by an incoming call or by pressing any key.

Additional screensavers:

www.my-siemens.com/screensaver

Start up anim.

Select animation to be shown when phone is switched on. Additional animations: **www.my-siemens.com/animations**

Shutdn anim.

Select animation to be shown when phone is switched off.

Own greeting

Enter greeting to be displayed instead of animation when phone is switched on.

Big letters

You can choose between two font sizes for the display.

Illumination

Set display illumination brighter/darker. The darker the setting the longer the standby time.

Contrast

Set display contrast.



Audio

Menu →  → **Audio**
→ Select function.

Ringer setting

Activate/deactivate the ringer or reduce it to a short beep.

Silent alert

Activate/deactivate the silent alert (functions in addition to ringer). The silent alert is activated if the loudest setting is set for the ringtone. This is to remind you **not to hold the phone to your ear when ringing** in order to avoid damaging your hearing.

Volume

Set different volumes for types of call/functions.

Warning!

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing caused by a loud ringtone!

Melodies

Set different ringtones for types of call/functions. Additional melodies: www.my-siemens.com/ringtones

Call screening



Only calls from phone numbers that are in the Phonebook/Addressbook or in a group are signalled audibly or by silent alert. Other calls are merely displayed.

Key tones

You can set the acoustic key tone: **Click** or **Tone** or **Still**

Minute beep

During the call, you will hear a beep once a minute as a reminder.

Info tones

Set service and alarm tones.

Dynamic Light

Menu →  → **Dynamic Light**
→ Select function.

You can switch on the visual signals (LEDs) on both sides of the phone for the following functions. The LEDs then flash in different rhythms depending on the current function.

Play demo

All flash rhythms are displayed in sequence. End with **Cancel**.

Incoming call

You can assign different flash rhythms to  **Calls**, **Other calls** and each group.

During call

Incoming msgs

Alarm

CarKit conn.

Net search

Low battery

Switch on/off

Switch the flash rhythm on or off that is to flash when the phone is switched on/off.

Net sync.

Switch the flash rhythm on or off that is to flash when the phone and network are synchronised.

Keys

Menu →  → **Keys**
→ Select function.

Any to answer

Incoming calls can be accepted by pressing any key (except for ).

Auto key lock

If activated, the keypad is locked automatically if no key has been pressed for one minute in standby mode. However, you can still be called and you can still make an emergency call.

Additional information

The keypad can also be directly locked and unlocked in idle state.

In each case:



Hold **down**.

Key tones

See "Audio" above.

Phone setup

Menu →  → Phone setup
→ Select function.

Call waiting

If you are registered for this service, you can check whether it is set and activate/deactivate **Call waiting**.

Hide ID

If activated, your phone number will not appear on the other party's display (depending on the service providers).

Divert

You can set the conditions under which calls are diverted to your mailbox or other numbers.

Set up call divert (example):

Unanswered



Select **Unanswered** (includes the conditions **Not reachable**, **No reply**, **Busy**)

Select Press and select **Set**. Enter the phone number to which the call will be diverted.

OK Press. After a short pause, the setting is confirmed by the network.

All calls



Divert all calls. Symbol in the top line of the display in standby mode.

Other possibilities for divert:

Not reachable, **No reply**, **Busy**,
Receiving fax, **Fax calls**, **Receiving data**

Status check

After a short pause the current information is shown.



Condition is set, not set.



Status unknown.

Clear all

All set diversions are cleared.

Menu →  → Phone setup
→ Select function.

Fact. settings

Reset phone to default values (factory setting).

Filesystem

Format the file system (**Format**) and delete or defragment **all** stored data (**Clean up**).

Phone identity

Display the phone identity number (IMEI) and software version.

Auto off

The phone switches off each day at the set time.

Clock

Menu →  → **Clock**
→ Select function.

Time/date

Edit First enter the date, then the time.

Additional information

If the battery is removed for longer than 30 seconds, the clock must be reset.

Time zones

Set the time zone for your area.

Date format

DD.MM.YYYY or MM/DD/YYYY

Time format

Select 24h or 12h.

Show clock

Activate/deactivate time display.

Buddhist year

Switch to the Buddhist calendar (not for all models).

Connectivity

Menu →  → **Connectivity**
→ Select function.

GPRS



Yes / **No** Activate or deactivate GPRS.

GPRS info

Display information on the connectivity status.

Data services

Menu →  → **Connectivity**
→ **Data services**
→ Select function.

For the **MMS**, **Wap** and **Mail**, **Java**, **Rms** applications at least one connection profile must be set up and activated.

If necessary enter **CSD settings** and **GPRS settings** (your service provider will supply you with information on this):

Options Open, select **Change sett.** → **Edit** and enter data.

Save Save settings.

Menu →  → **Connectivity**
→ Select function.

HTTP profile

Preparation of the phone depends on current service provider:

- The settings have already been installed by provider. You can start immediately.
- Access profiles have already been set by your provider. Then select and activate profile.
- The access profiles must be set manually.

If necessary, check with your service provider for details.

Fax/data mod.

Rec fax/data



The call will be signalled by a special ringtone (fax or data). Now start the communication program in your PC to receive the fax/data.

Send vce/fax



To switch from voice mode to fax mode, set the function on the phone **before** transmission.

Voice/fax rec

After the start of the PC communication program, activate the function **during** a call.

End transmission

End transmission with PC software and/or press .

Authentication

Edit

Activate encrypted WAP dial-up.

Security

Menu →  → **Security**
→ Select function.

Codes

(See p. 13)

Babysitter

Only **one** phone number can be dialled. **Hold down** the right soft key.

Only



Restrict calls to SIM-protected numbers in the Phonebook.

Last 10 only



Restrict calls to the list of "dialled numbers" (p. 27).

This SIM only



Your phone is prevented from being used with a **different** SIM card.

Menu →  → **Security**
→ Select function.

Barrings



The network barring restricts the use of your SIM card.

All outgoing: Outgoing calls except emergency numbers 999 and 112 are barred.

Outgo internat: Only national calls can be made.

Out.int.x home: International calls are not permitted apart from calls to your home country.

All incoming: The phone is barred for all incoming calls.

When roaming: You will not receive calls when outside your home network.

Status check: Status check for network barring

Clear all: Clear all barrings.

Network

Menu →  → **Network**
→ Select function.

Line



Two independent phone numbers must be registered.

Network info

The list of GSM networks currently available is displayed.

Choose network

Network search is restarted.

Auto network

If activated, the next network is dialled in the order of your "preferred networks".

Pref. network

Set the service providers you prefer when you leave your home network.

Band selection



Select either GSM 900, GSM 1800 or GSM 1900.

Fast search

Network reconnection is speeded up.

User group



Depending on service provider, you can create groups with this service. These can have access to internal (company) information, for example, or special tariffs apply. Please check with your service provider for details.



Accessories

Menu →  → **Accessories**
→ Select function.

Car Kit

Only in combination with an original Siemens handsfree Car Kit. The profile is activated automatically as soon as the phone is inserted into the cradle.

Auto answer

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

Auto off

If powered by the car's power supply, the time between switching off the ignition and deactivation of the phone can be adjusted.

Car loudspk.

Select a different audio setting if necessary for your Car Kit.

Headset

Only in conjunction with an original Siemens headset. The profile is automatically activated when headset is plugged in.

Accept call with Call key or PTT key (Push To Talk), even when the keylock is activated.

Auto answer

Calls are accepted automatically after a few seconds.

Auto answer

If these calls go unnoticed it is possible for the caller to eavesdrop.

Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- Five standard profiles are provided with default settings. They can be changed however: **Normal envi.**, **Quiet environ.**, **Noisy environ.**, **Car Kit**, **Headset**
- You can set two personal profiles (<No Title>).
- The special profile **Aircraft mode** cannot be changed.


Activate



Select default profile or personal profile.

Activate

Activate profile.

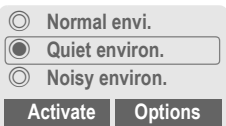

Setup



Select profile.

Options

Open menu and select **Change sett.** The list of available functions is displayed.

Car Kit

If an original Siemens Car Kit is used (p. 43) the profile is activated automatically as soon as the phone is inserted into the cradle.

Headset

If an original Siemens headset is used (p. 43) the profile is activated automatically as soon as the headset is in operation.

Aircraft mode

All alarms (appointments, alarm clock) are deactivated. This profile **cannot be modified**. The phone will switch off if you select this profile.

Activate



Scroll to **Aircraft mode**.

Select

Switch on profile. A security prompt must be confirmed. The phone switches itself off automatically.

Normal mode

When you switch on your phone again, the previously set profile will be reactivated automatically.



→ Select function.

The organiser provides you with a calendar with monthly, weekly and daily views as well as a notepad and dictating machine.

Calendar

You can enter appointments and tasks in the Calendar.

Navigate with the control key depending on which view is displayed:



Scroll between weeks/
days/hours.

Agenda Display daily agenda.

Appointments and any outstanding tasks for the current day are displayed in chronological order in the agenda. If an appointment time is reached with the alarm set, you will hear a signal tone.

Alarm

Types of appointment:



Memo. Description with up to 50 characters.



Speech memo. Record a voice memo.



Call. Enter phone number. Shown with alarm.



Meeting. Description with up to 50 characters.

Additional information

An alarm sounds even when the phone is switched off. To deactivate it press any key.

Message in display that alarms have been set: ⌚ alarm clock, 📌 appointments.

Deactivate all alarmsp. 44

Set alarm tonep. 37

Tasks

A task is displayed like an appointment in the agenda of the selected day. However it does not need a time. When no time is entered the task appears at the top of the list every day until it is marked as completed.

Notes

T9 support (p. 19) makes writing short notes such as shopping lists easier. Save confidential notes with the phone code (p. 13). Please note that with the aid of suitable programs it is possible for confidential notes to be read from the phone when connected to a PC.

Missed appointments

Events with an alarm to which you have not reacted are listed for reading.

Dictating machine

Use the dictating machine to record short voice memos.

Additional information

The use of this feature may be subject to restrictions under criminal law. Please inform the other party to the conversation in advance if you want to record the conversation and please keep such recordings confidential. You may only use this feature if the other party to the conversation agrees.

New recording

Menu → **1** → Dictating machine

The list of recordings is opened.

Select Press.

Record Start recording

Pause Recording pause.

Stop End recording.

Recording is automatically saved with a time stamp.

Save Name recording.

Save Save recording.

Or

Play Play back recording before storing it.

Play back

Menu → **1** → Dictating machine

The list of recordings is opened.



Select recording.

Play

Press. If **Handsfree** is set in the options menu, **Play loud** is now offered.

Time zones

Menu → **1** → Time zones

Set the time zone for your area.

Calend. setup

Select the start of the week and switch the birthdays display on or off.



→ Select function.

Alarm clock

The alarm will ring at the time set by you, even when the phone is switched off.



Activate/deactivate the alarm.

Setting



Display options: alarm call time and days.



Navigate to the days.



Set the days for the alarm calls, then press **OK**.

Calculator



Enter number (up to 8 digits).



Select calculator function.



Result is displayed.

Currency conv

You may calculate the exchange rates between three different currencies.

If no currency has yet been entered, press **OK** for the first input.



Enter the currencies and confirm with **OK**.



Enter exchange rate. Save with **Options** and **OK**.

Select a combination of currencies to convert.



Press, then enter amount.



Result is displayed.

Repeat Repeat conversion with other data.

Stopwatch

Two intermediate times can be clocked and stored.



Reset to zero.



Start/stop.



Intermediate time.



Press right soft key repeatedly.



Toggle between "+" and "-".



Convert to percentage.



Save/retrieve number.



Exponent (max. two digits).

Menu → 

→ Select function.

Countdown

A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.

Set Set period of time.

Start Start counter.

Stop Interrupt counter.

Edit Change period of time.

Reset Reset counter to starting time.

Camera (Accessories)

You can use the phone to save and send photos you have taken with a "QuickPic Camera" (integrated flash). Shots can be taken in two different formats:

- Low resolution: QQVGA 160x120 pixels, memory size up to 6 KB to send as a picture message (p. 31).
- High resolution: VGA 640x480 pixels, memory size of one shot up to 40 KB – e.g. for further editing on PC. To allow the picture to be viewed on the phone display, a QQVGA picture is created for every VGA shot.

Camera Press (in standby mode).

Or

Menu →  → **Camera**

The number of shots that can still be taken is shown.

OK Confirm.

The last shot taken is shown.



Scroll through photos.

Depending on the setting/situation, the following soft keys are available:

Shot

A shot requires a few seconds to be processed.

Take Press. You will hear an advisory tone when the exposure time has expired. The photo is shown on the display and saved automatically.

Flashlight

The flash function can be activated/deactivated in the option menu.

If the flash is switched on, a command is given to charge the flashlight before taking a shot:

Load  Press **briefly**. The flash is charged (min. battery capacity approx. 30 %).

Take Press. The photo is taken.



→ Select function.

Voice command

Functions can be started by a voice command. Up to 20 voice recordings can be saved in the phone for voice dialling or voice commands (not on SIM card!).

Record



→ Voice command

A list with the functions available is displayed.



Select a function.



Press.



Confirm function.



Start recording.

A short signal sounds. Now say the command corresponding to the function and **repeat** it when prompted.



Open menu for the operating functions.

Apply



Hold **down** (in standby mode).

A short signal (beep) sounds and a prompt appears in the display. Now say the function.

Remote synchronisation

You can use this function remotely to access externally filed data (addresses, calendar, etc.) and synchronise these with the data on your phone.

Synchronise



Select computer, start synchronisation.

Sync. setup



Start synchronisation.

Sync. Profile

Select a profile to set.



Open menu and select **Change**.

Server sett.

Select database areas: **Addresses, Calendar, Tasks, Notes** and fill in the input fields.

Provider

To select the connection profile, see **Data services**, p. 40.

Activating another sync. profile

Sync. setup Select.

Sync. Profile

Select, then choose a profile and activate with

Select.

Additional information

www.my-siemens.com/syncml

Left soft key

Assign a function/phone number to this key for fast access.

Change (example)

Internet Press **briefly**.

Edit Pick out the application, e.g. **New SMS**.

Phone number: Pick out from Phonebook/Addressbook.

Select Confirm setting.

Apply (example)

Soft key with a phone number/name assigned.

Carol Hold **down**.

Speed dialling keys

Use the number keys 2 to 9 as speed dialling keys. Number key 1 is reserved for the mailbox.

Change (example)

 Press an unassigned number key (2–9):

Set Pick out the application. **Phone number:** Pick out from Phonebook/Addressbook.

Bookmarks: Scroll to a URL in your bookmarks list

Select Confirm setting.

Apply (example)

 Hold **down** key.

My menu

Menu Press.

My menu Press.

Set up your own menu. The list of 10 entries is preset, but can be changed.

Change sett.

Each preset entry can be replaced by another entry from the selection list of **My menu**.



Select entry.

Options

Press and select **Change sett.**

Set

Press.



Select **new** entry from the selection list.

Set

Press.

If you have selected a phone number or a WAP favourite as a new entry, the corresponding application is started.

Reset all

Options Press and select **Reset all**.

After confirmation and entering the phone code, the default entries are reset.

To organise your files, you can use the file system like a PC file manager. The file system assigns special folders to different data types.

Menu → 

A list of the folders and files is displayed.

Open Open folder or file with relevant application or, if unknown data type:

Mark Highlight file.

Index structure

The file system assigns special folders to different data types.

Colour scheme	Colour scheme (p. 36)	*.col
Data inbox	Inbox	*.*
Misc	Other files	*.*
Pictures	Pictures and animations	*.bmx (anim)
	Sub-folder:	*.bmp
	Camera	*.png
		*.gif
	Own photos (p. 48)	*.jpg

SMS archive	Sub-folders:	*.smo *.smi
	Inbox: Incoming mail	
	Draft: Drafted messages	
	Unsent: Unsent SMS messages	
	Sent: Sent SMS messages	
Sounds	Ringtones, melodies and sounds	*.mid *.amr *.wav (Intel DVI)
Text modules	Text modules	*.tmo
Voice memo	Voice recordings	*.vmo
Java	Applications.	*.jad
	Data.	*.jar
	Download link.	*.db

Depending on the service provider the file system's structure, content and functionality may vary.

The phone provides you with several methods for sending texts and data via different transmission routes. Access to these functions is available in the option menu of the relevant application. These menu items can vary depending on the application.

Via SMS

Send... → Via SMS

Phonebook and Addressbook entries as well as appointments can be sent as an SMS to other suitable mobile phones. Several SMS messages may be created for larger objects.

SMS as text

Send... → SMS as text

Business cards, Addressbook entries or appointments can be sent as text messages (this may result in several messages being generated).

Data objects

Files received via SMS are stored in the file system (p. 51).

If you have any questions about using your phone, visit us at www.my-siemens.com/customer-care anytime. As further help we have listed below some frequently asked questions and answers.

Problem	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough.	Press On/Off key for at least two seconds.
	Flat battery.	Charge battery. Check charging indicator in display.
	Battery contacts dirty.	Clean contacts.
	See also below under "Charging error"	
Too little stand-by time.	Frequent use of organiser and games.	Restrict use if necessary.
	Speed search activated.	Deactivate speed search (p. 42).
	Display illumination on.	Switch off display illumination (p. 36).
	Unintentional keystrokes (illumination!).	Activate key lock (p. 38).
Charging error (charge icon not displayed).	Battery totally discharged.	1) Plug in charger cable, battery is on charge. 2) Charge icon appears after approx. 2 hours. 3) Charge battery.
	Temp. out of range +5 °C to +40 °C.	Make sure the ambient temperature is right, wait for a while, then recharge.
	Contact problem.	Check power supply and connection to the phone. Check battery contacts and device interface, clean them if necessary, then insert battery again.
	No mains voltage.	Use different mains power socket, check mains voltage.
	Wrong charger.	Only use original Siemens accessories.
	Battery faulty.	Replace battery.
SIM error.	SIM card not inserted correctly.	Check that the SIM card is inserted correctly (p. 8).
	Dirty SIM card contacts.	Clean SIM card with a dry cloth.
	SIM card with wrong voltage.	Use 3V SIM cards only.
	SIM card damaged (e.g. broken).	Carry out a visual check. Change SIM card at service provider.

Problem	Possible causes	Possible solution
No network connection.	Weak signal.	Move higher, to a window or an open space.
	Outside GSM range.	Check service provider's coverage area.
	Invalid SIM card.	Complain to the service provider.
	New network not authorised.	Try manual selection or select a different network (p. 42).
	Network barred.	Check network barrings (p. 42).
	Network overloaded.	Try again later.
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic (p. 42). Switching phone off and on again can speed this up.
Calls not possible.	Second line set.	Set first line  (p. 42).
	New SIM card inserted.	Check for new barrings.
	Charge limit reached.	Reset limit with PIN2 (p. 27).
	Credit used up.	Load credit.
Certain uses of phone not possible.	Call restrictions are in place.	Barrings can be set by service provider. Check barrings (p. 42).
Impossible to make entries in Phonebook.	Phonebook is full.	Delete entries in Phonebook or transfer to Addressbook (p. 23).
Voice mail not functioning.	Call divert to mailbox not set.	Set call divert to mailbox (p. 39).
SMS (text message)  flashing.	SMS memory is full.	To free up capacity, delete (p. 30) or file messages (SMS).
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Capacity problems with, for example, Games & More, ringtones, pictures, SMS archive.	Handset memory full.	Delete files in the relevant areas.
No WAP access, downloading not possible.	Profile not activated, profile settings wrong/incomplete.	Activate (p. 33), set WAP profile (p. 34) or set HTTP profile. If necessary ask your service provider.

Problem	Possible causes	Possible solution
Text message cannot be sent.	Service provider does not support this service.	Contact your service provider.
	Phone number for service centre not set or incorrect.	Set service centre (p. 33).
	SIM card contract does not support this service.	Contact your service provider.
	Service centre too busy.	Repeat message.
	Recipient does not have a compatible phone.	Check.
EMS pictures and sounds not displayed at destination phone.	Destination phone does not support the EMS standard.	
No Internet access possible.	Incorrect WAP profile set, or wrong or incomplete settings.	Check settings or ask contact service provider.
PIN error/ PIN2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) supplied with the SIM card according to the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.
Phone code error.	Three wrong entries.	Contact Siemens Service (p. 56).
Service provider code error.	No authorisation for this service.	Contact your service provider.
Too few/too many menu entries.	Functions may have been added or deleted by the service provider via the SIM card.	Check with your service provider.
No fax possible.	Wrong settings in the PC.	Check settings (p. 41).
	No authorisation for this service.	Contact your service provider.
Charge meter does not work.	Charge pulse is not transmitted.	Contact your service provider.
Damage		
Severe shock.	Remove battery and SIM and re-insert them. Do not dismantle the phone!	
Phone became wet.	Remove battery and SIM. Dry immediately with a cloth, but do not apply heat. Dry connector contacts thoroughly. Stand mobile upright in an air current. Do not dismantle the phone!	

Reset all settings to factory default (see also p. 39): *#9999# 

Simple, straightforward support for technical and operational queries is available from our online support service on the Internet:

www.my-siemens.com/customer care

You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

You will find the most frequently asked questions and answers in this user guide in the chapter entitled "Questions & Answers", p. 53.

When calling, please have ready your receipt, the phone identity number (IMEI, to display, press *# 0 6 #), the software version (to display, press *# 0 6 #, then **Info**) and, if applicable, your Siemens Service customer number.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary or you have a claim under warranty or guarantee you will receive rapid, reliable assistance from our Service Centres:

Abu Dhabi	0 26 42 38 00	Hungary	06 14 71 24 44
Argentina	0 80 08 88 98 78	Iceland	5 11 30 00
Australia	13 00 66 53 66	India	01 13 73 85 89 - 98
Austria	05 17 07 50 04	Indonesia	0 21 46 82 60 81
Bahrain	40 42 34	Ireland	18 50 77 72 77
Bangladesh	0 17 52 74 47	Italy	02 24 36 44 00
Belgium	0 78 15 22 21	Ivory Coast	21 35 02 35
Bolivia	0 21 21 41 14	Jordan	0 64 39 86 42
Bosnia Herzegovina	0 33 27 66 49	Kenya	2 72 37 17
Brazil	0 80 07 07 12 48	Kuwait	2 45 41 78
Brunei	02 43 08 01	Latvia	7 50 11 18
Bulgaria	02 73 94 88	Lebanon	01 44 30 43
Cambodia	12 80 05 00	Libya	02 13 50 28 82
Canada	1 88 87 77 02 11	Lithuania	8 52 74 20 10
China	0 21 50 31 81 49	Luxembourg	43 84 33 99
Croatia	0 16 10 53 81	Macedonia	02 13 14 84
Czech Republic	02 33 03 27 27	Malaysia	03 21 63 11 18
Denmark	35 25 86 00	Malta	00 35 32 14 94 06 32
Dubai	0 43 96 64 33	Mauritius	2 11 62 13
Egypt	0 23 33 41 11	Mexico	01 80 07 11 00 03
Estonia	06 30 47 97	Morocco	22 66 92 09
Finland	09 22 94 37 00	Netherlands	0 90 03 33 31 00
France	01 56 38 42 00	New Zealand	08 00 27 43 63
Germany *	0 18 05 33 32 26	Nigeria	0 14 50 05 00
Greece	0 80 11 11 11 16	Norway	22 70 84 00
Hong Kong	28 61 11 18	Oman	79 10 12
		Pakistan	02 15 66 22 00

* 0.12 euros/minute

Paraguay	8 00 10 20 04
Philippines	0 27 57 11 18
Poland.....	08 01 30 00 30
Portugal	8 08 20 15 21
Qatar	04 32 20 10
Romania	02 12 04 60 00
Russia.....	8 80 02 00 10 10
Saudi Arabia	0 22 26 00 43
Serbia	01 13 22 84 85
Singapore	62 27 11 18
Slovak Republic.....	02 59 68 22 66
Slovenia	0 14 74 63 36
South Africa	08 60 10 11 57
Spain.....	9 02 11 50 61
Sweden.....	0 87 50 99 11
Switzerland	08 48 21 20 00
Taiwan	02 23 96 10 06
Thailand	0 22 68 11 18
Tunisia	71 86 19 02
Turkey.....	0 21 65 79 71 00
Ukraine	8 80 05 01 00 00
United Arab Emirates.....	0 43 31 95 78
United Kingdom	0 87 05 33 44 11
USA	1 88 87 77 02 11
Vietnam.....	45 63 22 44
Zimbabwe	04 36 94 24

Your phone has been designed and crafted with great care and attention and should also be treated with care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Nevertheless, should your phone become wet, disconnect it immediately from the power supply and remove the battery!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store your phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE).

The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original.

CE 0168

Technical Data

GSM class	4 (2 watt)
Frequency range:	880 - 960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710 - 1,880 MHz
GSM class:	1 (1 watt)
Frequency range:	1,850 - 1,990 MHz
Weight:	83 g
Size:	101x46x21 mm (71 ccm)
Li-Ion battery:	700 mAh
Operating temp.:	-10 °C... 55 °C
SIM card:	3.0 V
SAR	0.64 W/kg*

* This applies to the phone together with the front and back covers and keyboard supplied with the phone.

Phone ID

You will need the following details if you lose your phone or SIM card. Please enter here:

the number of the SIM card (on the card):

.....
the 15-digit serial number of the phone
(under the battery):

.....
the Customer Service number of the
service provider:

.....

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

INFORMATION ON RF EXPOSURE / SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS SET BY THE EU (1999/519/EC) FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

These limits are part of comprehensive recommendations for the protection of the public. The recommendations were developed and confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

Before a radio equipment may be placed on the market, compliance with the European laws and the respective technical limit requirements must be demonstrated. Only then the CE mark may be affixed**. The limit for mobile phones recommended by the Council of the European Union employs a unit of measurement known as the Specific Absorption Rate, or SAR. This SAR limit is 2.0 W/kg***. This corresponds with the requirements of the International Commission for Non-Ionizing Radiation Protection ICNIRP and was adopted into the European Norm for Mobile Radio Equipment EN 50360. The SAR of mobile phones is determined in accordance

with the European Norm EN 50361. This involves measuring the maximum value in all frequency bands of the mobile phone with the phone transmitting at its highest power level. The actual SAR level of the phone during normal operation may be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for compliance against the norm is

0,64 W/kg****.

The SAR information can also be found on the Siemens web site at www.my-siemens.com. While there may be differences between the SAR levels of various phones and at various positions, all Siemens products meet the legal requirements.

* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information: www.who.int/peh-emf, www.mmfa.org, www.my-siemens.com.

** The CE mark confirms that the product is in compliance with the legal requirements of the European Union as a prerequisite for the placing on the market and the free movement of goods within the European internal market.

*** averaged over 10g body tissue.

**** SAR values may vary depending on national requirements and frequency bands. SAR information for different regions can be found at www.my-siemens.com.

INFORMATION ON RF EXPOSURE / SPECIFIC ABSORPTION RATE (SAR) THIS MOBILE PHONE MEETS THE LI- MITS FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTRO- MAGNETIC FIELDS

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines from the International Commission on Non-ionizing Radiation Protection (ICNIRP). These limits are part of comprehensive guidelines for the protection of the public and establish permitted levels of RF energy for the population. The guidelines were confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure limit for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg**. Tests for SAR are conducted in all frequency bands using standard operating positions with the phone transmitting at its highest power level. The actual SAR level of the phone during operation can be well below the

maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for use at the ear is

0,64 W/kg***.

SAR information can also be found at www.my-siemens.com. While there may be differences between the SAR levels of various phones and at various positions, they all meet the international guidelines for safe RF exposure.

* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information: www.who.int/peh-emf, www.mmfaai.org, www.my-siemens.com.

** averaged over 10g of tissue.

*** SAR values may vary depending on national requirements and frequency bands. information for different regions can be found at www.my-siemens.com.

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention)
 - Repairs or other work done by persons not authorised by Siemens.
 - Components on the printed circuit board are manipulated
 - The software is manipulated
- Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: micro-wave, sauna etc.)
- Devices fitted with accessories not authorised by Siemens
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 - The Republic of Ireland.

- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

A		Car Kit.....	43
Addressbook.....	24	Care of phone	58
Agenda.....	45	CB services	28
Aircraft mode	44	Cell Broadcast (CB)	28
Alarm		Change PIN	13
Alarm clock.....	47	Charging the battery	9
Appointment	45	Command (voice command)	49
Switch off	45	Conference	17
Alarm clock.....	47	Countdown.....	48
Animation, at switch off.....	36	CSD.....	40
Answering service (external).....	28	Currency converter.....	47
Any key, accept call	38	Customer service, Siemens.....	56
Appointments.....	45	D	
Archive entry number	23	Data exchange (setting)	40
Audio	37	Data service (setting)	40
Auto. redial.....	15	Date format	40
B		Dial-up access (connection)	40
Babysitter	41	Dictating machine	46
Battery	8, 9	Display	
quality declaration	63	Settings.....	36
Browser.....	33	Symbols	6
Business card.....	22	Display (settings)	36
C		Diversion	39
Calculator.....	47	Download	34
Calculator functions.....	47	Duration/charges.....	27
Calendar.....	45	Dynamic Light.....	38
Call		E	
Accept/finish.....	16	E-mail	32
Barring.....	42	Emergency number	11
Conference	17	Enter PIN.....	10
Costs	27	Extras	47, 58
Divert	39	F	
End.....	15	Factory settings.....	39
Reject	16	Fast access key.....	50
Swap (change).....	17	File system.....	51
Call diversion	39	Filter for calls	37
Calling images		Flashlight.....	48
(picture, Addressbook).....	24	Frequency (band).....	42
Camera.....	48		

-
- G**
- Games & More 34
 - Games (download) 34
 - Getting started 8
 - GPRS 40
 - Group 26
 - Guarantee certificate 64
- H**
- Handset volume 15
 - Handsfree talking 16
 - Headset 43
 - Hide ID 39
 - Highlighting mode 21
 - Hold call 17
 - Hotline, Siemens 56
- I**
- Identity number (IMEI) 39
 - IMEI number 39
 - Index (file system) 51
 - International dialling code 15
 - Internet (WAP) 33
- K**
- Keypad (settings) 38
- L**
- Last 10 only 41
 - List
 - Calls 27
 - Messages 29
 - Loss of phone, SIM card 59
- M**
- Mailbox 28
 - Maintenance of phone 58
 - Melodies 37
 - Messages 29
 - MMS 31
 - My menu 50
- N**
- Network barring 42
 - Network functions 42
 - Notes 45
 - Number busy 15
- O**
- Only  41
 - Only this SIM 41
 - Organiser 45
- P**
- Phone (settings) 39
 - Phone barring 41
 - Phone code 13
 - Phone data 59
 - Phone identity number. (IMEI) 39
 - Phonebook 23
 - Picture (Addressbook) 24
 - PIN error 55
 - Preferred directory 22
 - Preventing accidental activation .. 14
 - Product data 59
 - Profiles
 - Messages 29
 - Phone 44
- Q**
- Questions & Answers 53
- R**
- Records 27
 - Redial 15
 - Reminder 15
 - Remote synchronisation 49
 - Ringtones (tunes/melodies) 37
- S**
- Safety precautions 2
 - Screensaver 36
 - Second phone number
(connection) 42

Security	13, 41
Security numbers.....	13
Service numbers, Siemens	56
Set clock.....	40
Set ringtone	37
Set time/date	40
Setup	36
Shown in the display.....	6
Shutdown animation	36
Signal strength	11
SIM card	
Clear barring.....	14
Insert.....	8
Problems	53
SMS.....	30
SOS	11
Special characters.....	18
Speed dialling keys	50
Standard values	39
Standby mode	11
Standby time	9
Start animation.....	36
Start menu (WAP).....	33
Stopwatch	47
Surf & Fun	33
Swap	17
Switch on animation.....	36
Symbols	6

T

T9 text entry	19
Tasks	45
Technical Data	59
Text blocks.....	19
Time zones	40

U

Upper/lower cases	18
-------------------------	----

V

Voice command	49
Voice dialling	25
Voice mail (mailbox)	28
Volume	
Handset volume	15
Profiles.....	44
Ringtone	37

W

WAP profile	33
Warning tones	37